

TruWood™ Premium Timber

36", TruWood Premium Timber Kit, Large

Part Number: TWL-36-SP-AU

INSTALLATION GUIDE

TruWood Premium Timber Kit models: OR36-TRAD, RS-3626.

TruWood Premium Timber Kit includes:

- Large log (3)
- Slim log (3)
- Bag of wood chips (1)

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for linear fireplaces or more compact for traditional fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.


The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking.

1. Ensure the ember bed media (crystals, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select the large log from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.





2. Select the two large logs and rest them on the left and right of the base log. These will create your main stack.

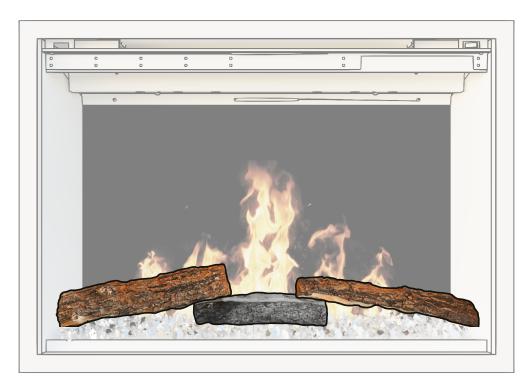

3. Select the two slim logs and lay them under the large logs. The inside end of the log will be towards the flame screen and the outside end will be towards you.





4. Select the slim log and lay it across the main log diagonally.



5. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.







36", TruWood Premium Timber Kit, Large installation is complete.



Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.