

TruWood™ Premium Timber

96"-120", TruWood Premium Timber Kit, Large

Part Number:
TWL-96/120-SP-AU

INSTALLATION GUIDE

TruWood Premium Timber Kit models:
LPM-9616V2, OR100-MULTI, OR120-MULTI, LPM-12016V2.

TruWood Premium Timber Kit includes:

- Large logs (9)
- Slim logs (11)
- Bag of wood chips (1)

Assembly order

You will need to gain access to the ember bed of your fireplace. Refer to your fireplace manual for instructions for removing the front glass to access the ember bed.

Please Note: This kit is designed to fit multiple fireplace sizes. Your log set might be more spread out for longer fireplaces or more compact for the shorter fireplaces. If your fireplace is one of the smaller units this kit is compatible with, you may not need to use all the logs based on the available space of your fireplace.

The placement is what we recommend and what we optimized the set to, but you can have fun with them and place them to your liking.

1. Ensure the ember bed media (crystals, etc.) that came with the fireplace is installed first. If updating an existing fireplace, remove the old logs to accommodate the TruWood logs. Then select one of the large logs from the kit and place it in the middle of the fireplace. This will be the base of the TruWood log layout.



2. Select two large logs and rest them on the left and right of the first log. These are now creating the main portion of you stack. Spreading these out more for linear shaped fireplaces.



Assembly order

3. Select two large logs, and stack these on the ends of the 16" logs.



4. Select the two slim logs and stack these on the ends of the large logs.



5. Select two large logs, and rest them on the left and right of the slim logs. The large should be resting on the ember bed. Note on 96" - 100" fireplaces, these logs may need to be brought in closer or not used at all.



Assembly order


6. Select two large logs, and lay these near the other large logs. The inside end of the log will be towards you and the outside end will be towards the flame screen. Note this step may not be needed on 96"-100" units.



7. Select two slim logs and lay them under the large logs previously stacked, crossing directions where possible.



8. Select two slim logs, and stack these laying under the slim logs.

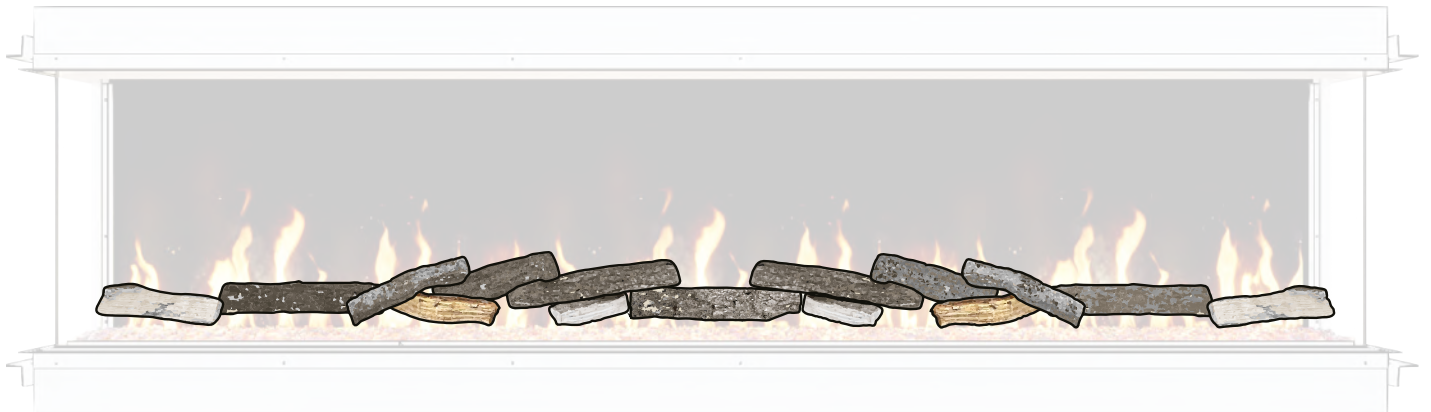

Assembly order

9. Select two slim logs, and stack these laying over the large filler logs. The inside end of the log may be towards you and the outside end may be towards the flame screen. Note this step may not be needed on 96"-100" units.



10. Select two slim logs, and stack these laying over the large logs. The inside end of the log will face the flame screen and the outside end may be towards you. Note this step may not be needed on 96"-100" units.



11. Select a slim log and lay it across the main log diagonally.



Assembly order

12. Use the bag of wood chips and place a few chips and chunks in the gaps between the logs. We recommend using these sparingly for the best appearance and to maximize the light output from the ember bed.



96"-120", TruWood Premium Timber Kit, Large installation is complete.



Thank you for choosing Modern Flames, we appreciate all our customers and hope you have many years of enjoyment of our products.

07 5630 6840

| info@modernflames.com.au

| modernflames.com.au